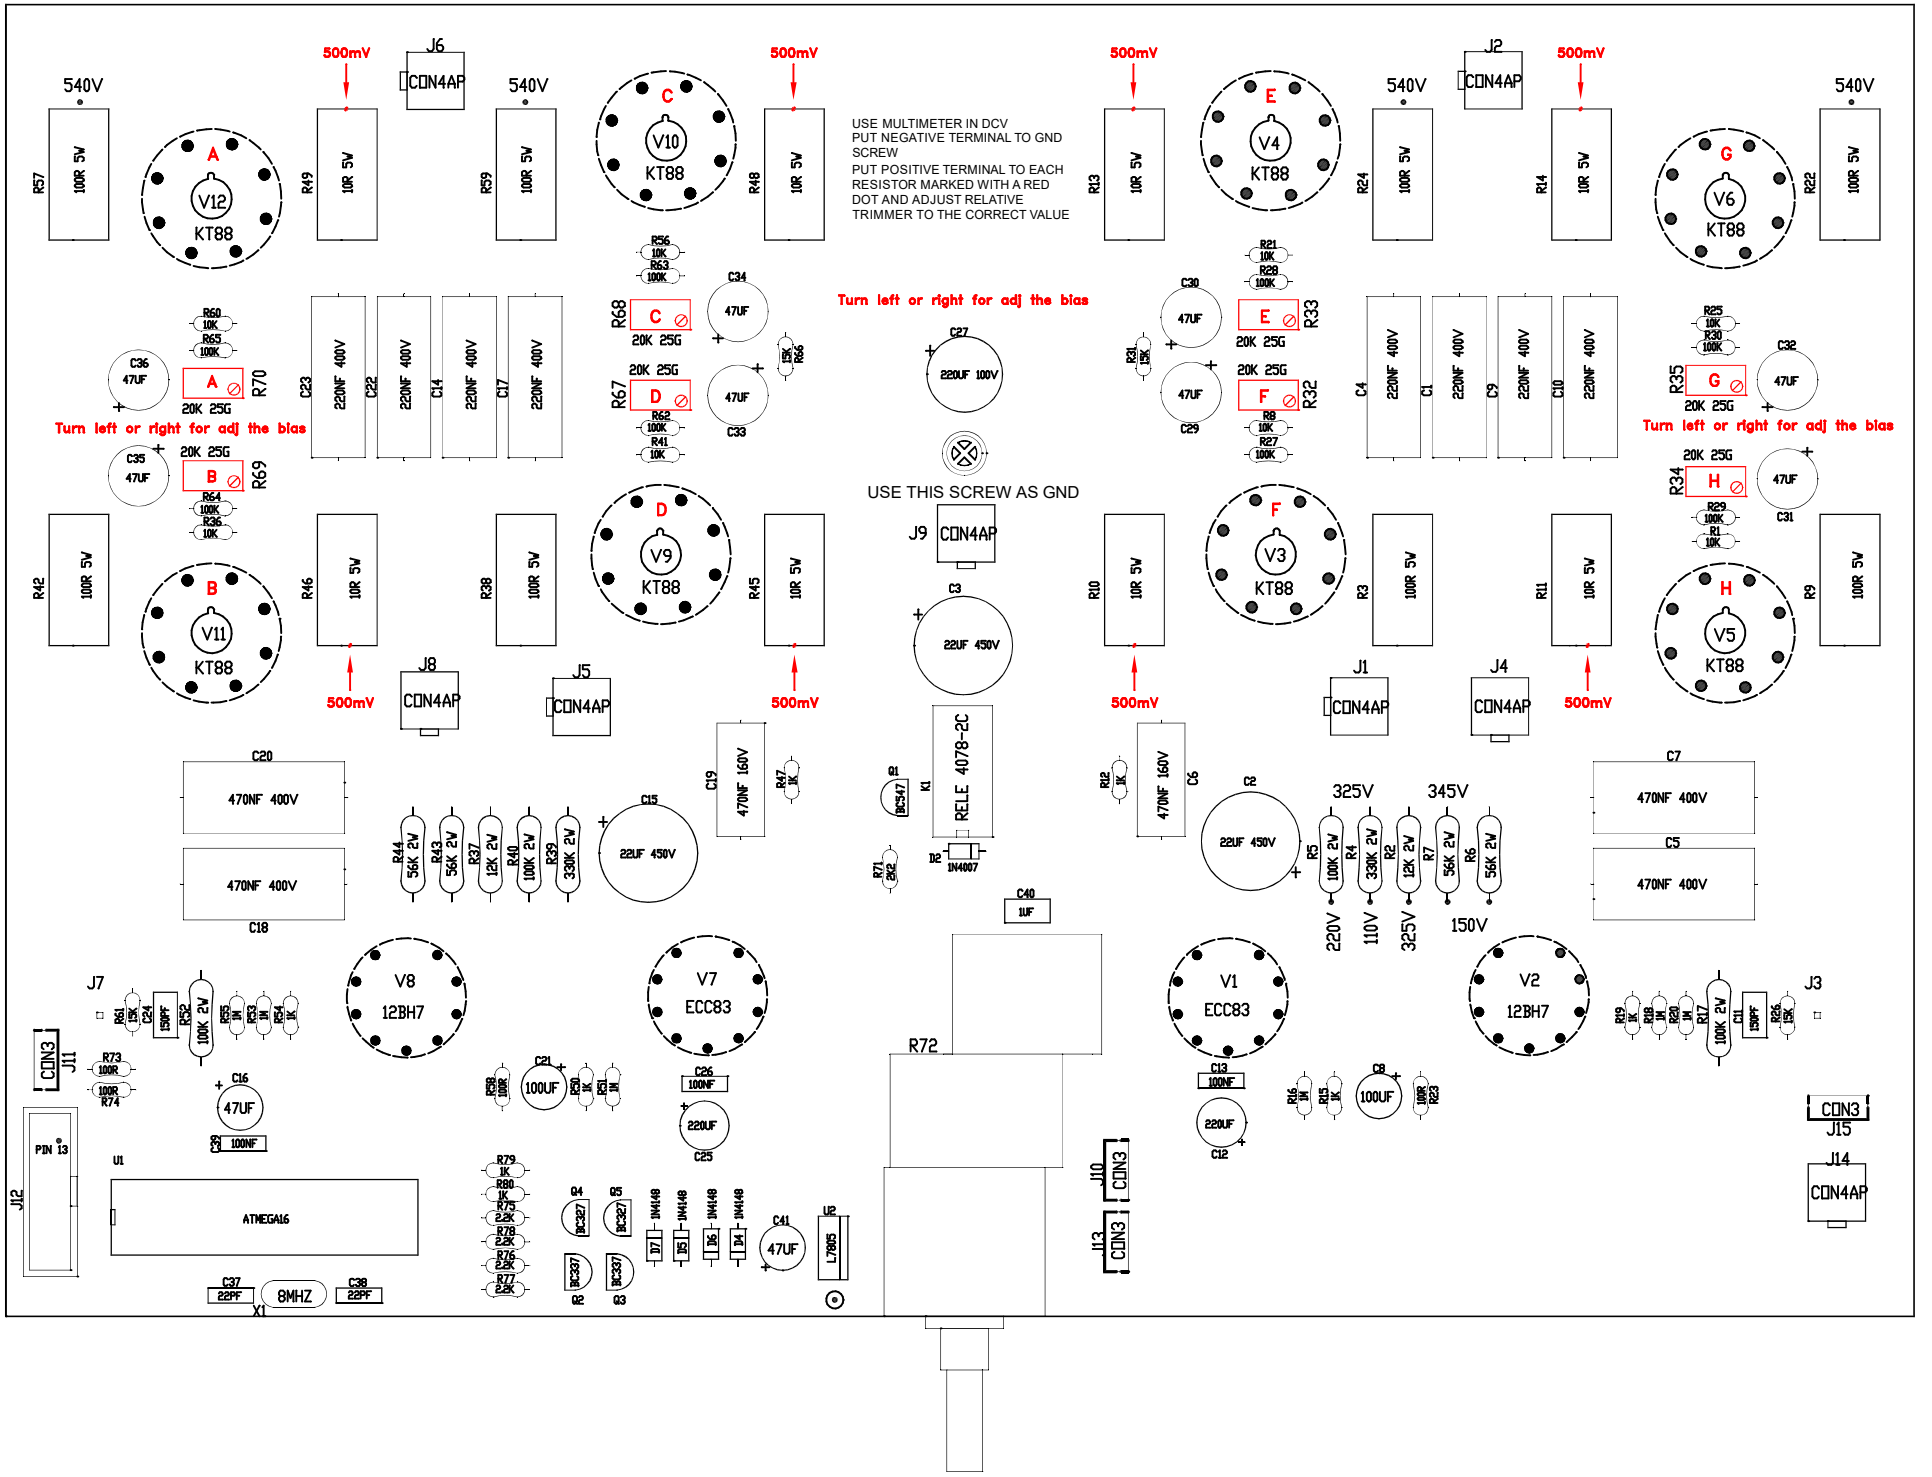
USE MULTIMETER IN DCV
PUT NEGATIVE TERMINAL TO GND SCREW
PUT POSITIVE TERMINAL TO EACH RESISTOR MARKED WITH A RED DOT AND ADJUST RELATIVE TRIMMER TO THE CORRECT VALUE
Turn left or right for adj the bias
USE THIS SCREW AS GND
500mV
540V
325V
345V
220V
110V
150V
KT88
ATMEGA16
8MHZ
RELE 4078-2C
CON4AP
CON3